


QUIK-SHIELD

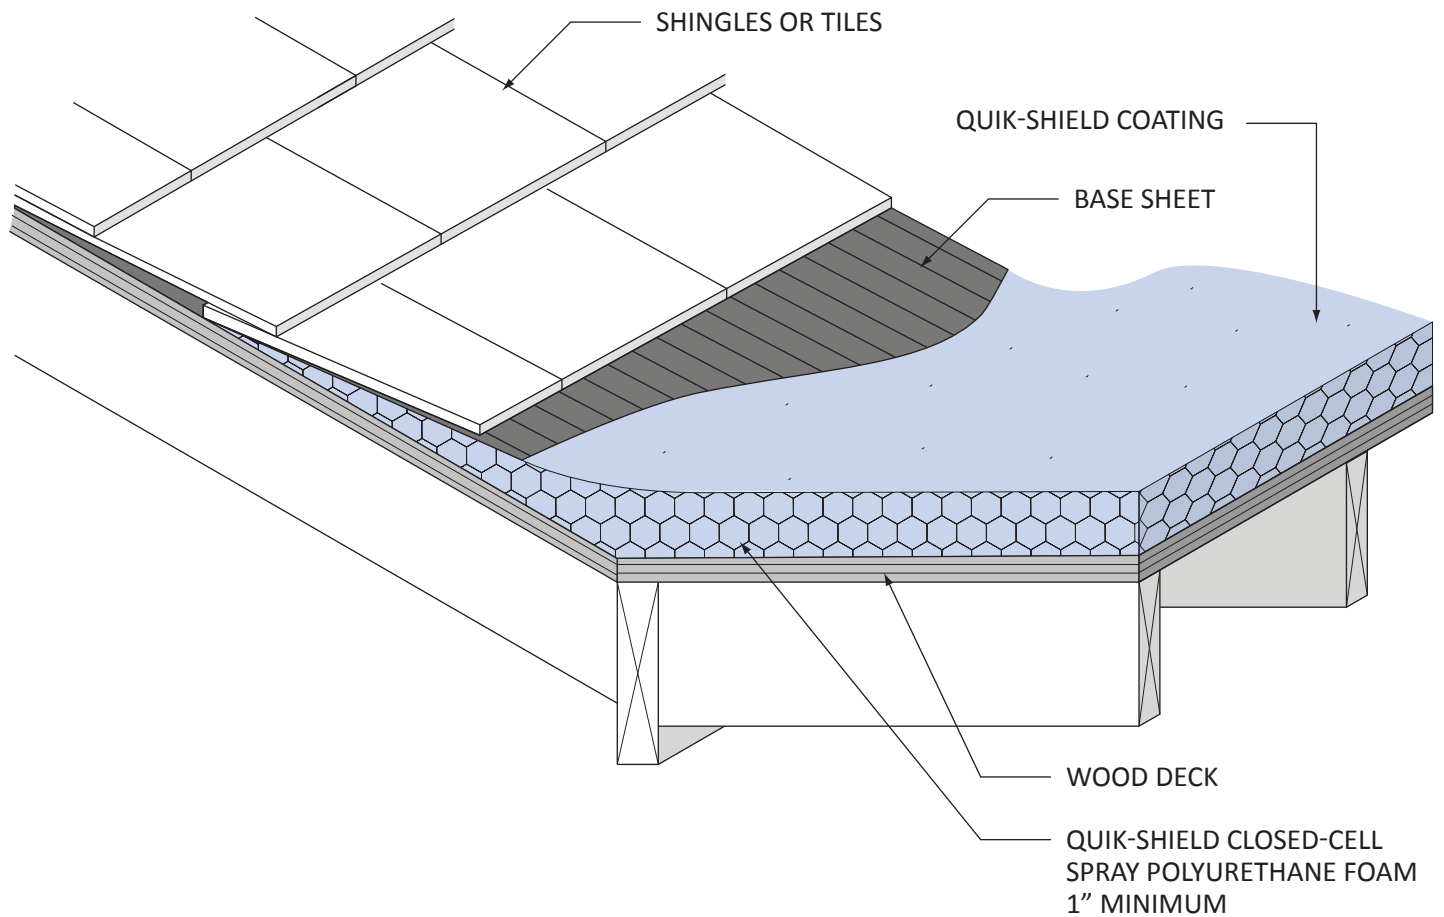

NOTE:
SPRAYED POLYURETHANE FOAM MUST BE APPLIED BENEATH THE BASE SHEET

FLAT ROOF TO SHINGLE OR TILE TIE-IN

QSR-111 07-2012



SWD Urethane
Mesa, Arizona
800-828-1394
swdurethane.com